


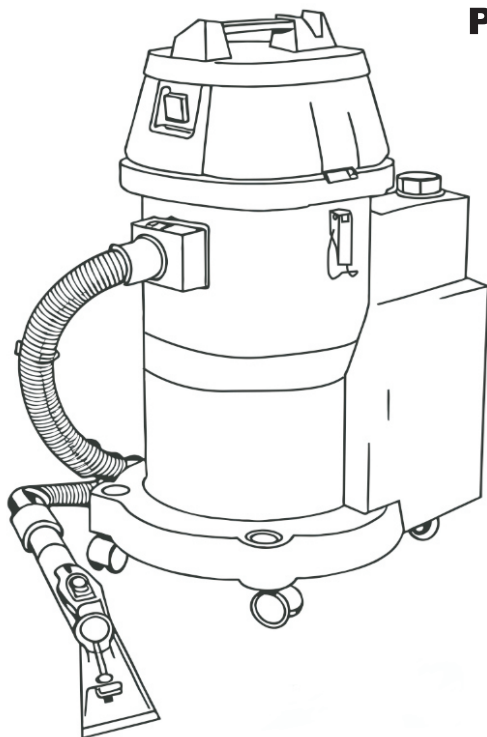

VACUUM CLEANER

Original Operating Instructions

ID VCW35
Part No.:29018



Read though carefully and understand these instructions before use.

SAFETY INSTRUCTIONS & WARNINGS

IMPORTANT SAFETY INSTRUCTIONS

For your safety: Carefully read and understand all instructions, this appliance complies with mandatory safety regulations for electrical equipment. However, improper use will harm personal and property, please read these instructions carefully before turning on machine.



1. When using electrical appliances, you must follow basic precautions.
2. Do not allow other uses and unattended operation.
3. Check that the electrical voltage is correct before use.
4. Do not use the air outlet directly against people or animals when using this product.
5. The manufacturer can not be liable for damages due to improper use or improper operation.
6. If the power cord is damaged, contact your local service personnel or dealer qualified personnel for replacement to avoid danger.
7. Do not inhale flammable, toxic liquids, such as gasoline, oil, acids or other volatile substances, to avoid dangerous hazards.
8. Only relevant professionals can repair electrical equipment. Improper repairs may result in considerable risk.
9. Do not store the appliance directly at high temperatures such as hot stoves or heat sinks.
10. Do not use a cleaning agent or detergent containing solvent.
11. This device does not apply to children or those who lack experience with the use of relevant products unless they have been supervised or instructed to use the equipment to be responsible for their safety. Children should be supervised to ensure that they do not play the device.
12. Turn off the appliance when cleaning or removing it. Before cleaning or servicing the appliance, remove the plug from the socket and pull the plug out of the socket.
13. Unauthorized parts or third party accessories may be dangerous to make the warranty invalid.
14. Always check whether the float is normal.
15. If you notice that the liquid leaks from your equipment, immediately turn it off and unplug the plug.
16. Do not use the appliance in a damp room.
17. Children should be supervised to ensure that they do not play the equipment, only the equipment stored in children can not access, safe and dry place to store.

18. Do not inhale hot dust ashes or sharp objects.
19. Do not touch the spectator directly when blowing. When the time to blow the children away.
Wear safety goggles.
20. Do not reverse the vacuum cleaner, causing damage to the motor
21. The hose can not be overly bent and forced to elongate, otherwise the hose will be deformed or damaged.
22. Do not allow the lid part to penetrate into the water or rinse with water to prevent water from entering the electronic parts. Leakage, proper operation: gently wipe the surface with a rag

IMPORTANT SAFETY INSTRUCTIONS




This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. Correct Disposal of this product This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Specification :

220-240V~	50/60Hz	1500W	35L
430 Stainless Steel Tank			Class II, IPX4

PRODUCT OVERVIEW

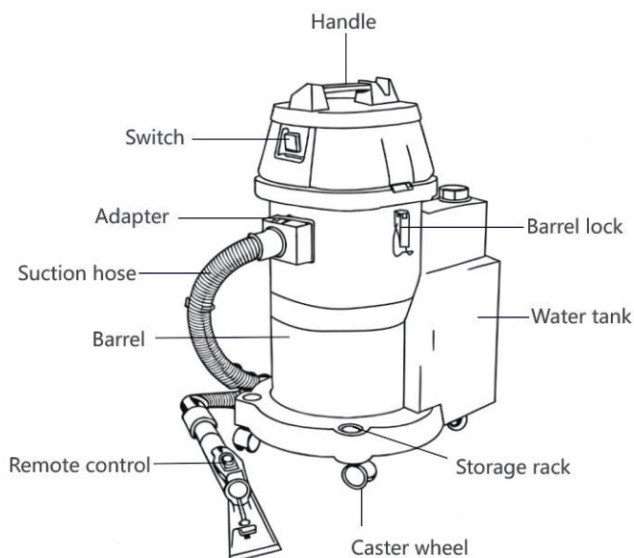


ACCESSORIES INCLUDING


* According to different occasions to choose suitable accessories

1	Suction hose
2	Short Connector
3	Long Connector
4	Metal Tube
5	Dry Floor Nozzle
6	Wet Floor Nozzle
7	Crevice Tool
8	Dust Brush
9	Remote control

Accessories

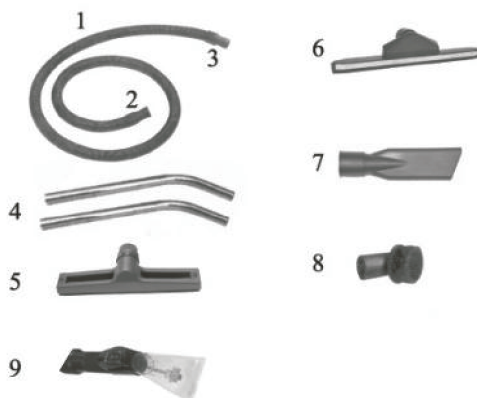


INSTALLATION

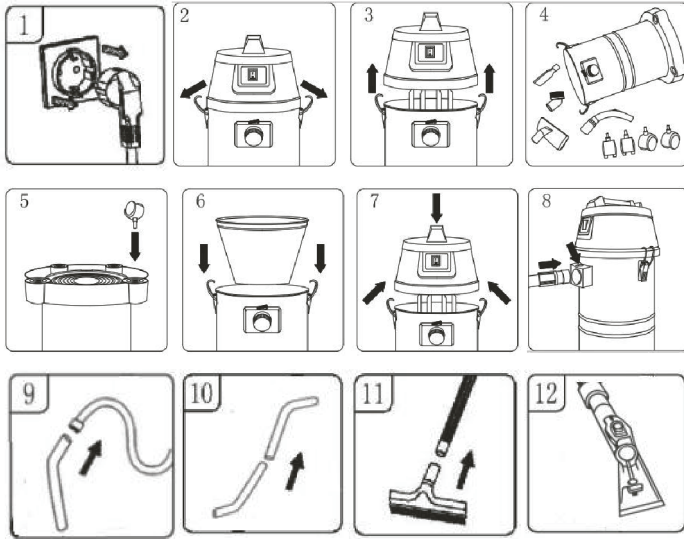

CAUTION Make sure that the power cord plug and socket are de-energized when assembling the vacuum cleaner

OPEN THE VACUUM CLEANER

1. Make sure the power cord is disconnected from the socket (Fig.1)
2. Loose Clips (Fig.2)
3. Lift the nose from the dust barrel and take out the white filter bag. (Fig. 3)
4. Take out all accessories from the dust barrel. (Fig.4)
5. Install the wheels. Align the corresponding holes, pressure down, and install the four caster on the base. (Fig.5)
6. Put the white filter bag in the barrel. (Fig.6)
7. Place the top cover on the filter bag and lock it with both sides of the buckle. (Fig.7)
8. Press the red button on the adapter and insert the suction hose with connector to the adapter to make sure they are connected well. (Fig.8)
9. Connect 1pc of metal tube to the suction hose. (Fig.9) Then connect 2pcs of metal tubes together.(Fig.10)
10. Optional brush, nozzle. Will be one end of the brush to plug in place. (Fig.11)
11. Connect the remote control to the suction hose directly for carpet cleaning.(Fig.12)

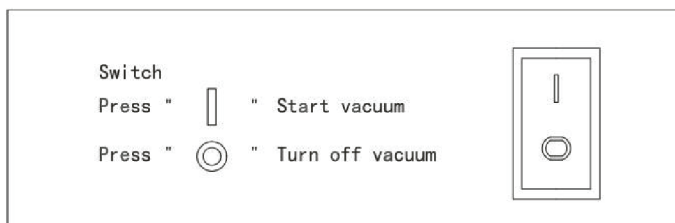


OPERATION OF VACUUMING DUSTS



1. Make sure that the power cord is disconnected the socket. (Fig.1)
2. Release the barrel lock. (Fig.2)
3. Lift the nose from the dust barrel and take out the white filter bag. (Fig.3)
4. Take out all accessories from the dust barrel. . (Fig.4)
5. Install the wheels. Align the corresponding holes, pressure down, and install the four caster on the base. (Fig.5)
6. Put the white filter bag in the barrel. (Fig.6)
7. Place the top cover on the filter bag and lock it with both sides of the buckle. (Fig.7).

8. Press the red button on the adapter and insert the suction hose with connector to the adapter to make sure they are connected well. (Fig.8)
9. Connect 1pc of metal tube to the suction hose. (Fig.9) Then connect 2pcs of metal tubes together.(Fig.10)
10. Optional brush, nozzle. Will be one end of the brush to plug in place.(Fig.11)
11. Fill the water tank with clean water ready for carpet cleaning.(Fig.12)
12. Insert the power cord. (Fig.13)
13. Press on the switch button. (Fig. 14)
14. Start the vacuum with optional vacuuming heads. (Fig. 15)
15. Connect the remote control to the flexible suction hose directly and press ON/OFF button for carpet cleaning.(Fig.16)

**WARNING: Do not suck dust with liquid at the same
Operation when dusts tank is full**

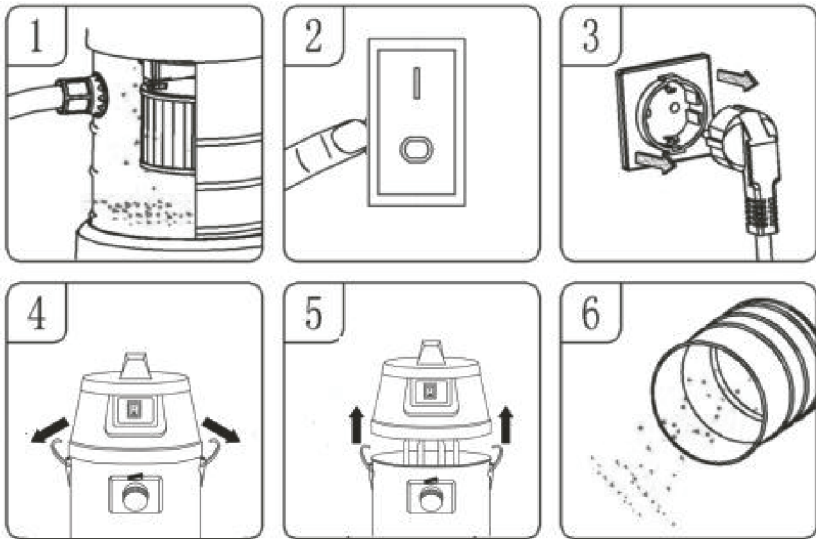


1. The dust barrel is full of dust. (Fig.1)
2. Turn off the switch. (Fig.2)
3. Unplug the power cord. (Fig.3)
4. Release the barrel lock. (Fig.4)
5. Raise the nose assembly from the dust container. (Fig.5)
6. Pour out the garbage. (Fig. 6)

FILTER BAG CLEANING

Filter bag should be taken out and washed by clean and warm water when it was covered with dust, you can use the litmusless scour to wash



Application for accessories

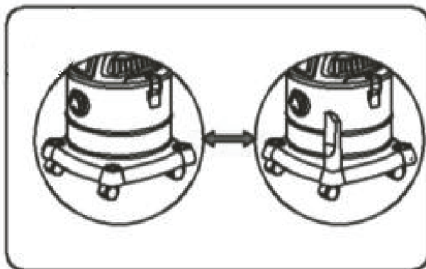

Storage brush, crevice nozzle, floor nozzle, tubes.


MAINTENANCE

1. After cleaning the barrels, filters and related accessories, check if leaks. After each use, clean the filter and do not use a wet filter at all times.
2. Check the plug if damage, place the plug.
3. Check whether there is something plug the air intake, if any, please clean.
4. Carefully put the machine, do not beat
5. Keep the machine dry
6. if filter covered with dust, wash with cold water, if necessary, may also use neutral detergent cleaning, Do not use corrosive objects to clean. Do not put entire head directly in the water cleaning.
7. Do not let the machine work for a long time, each working time is best in 2 hours, otherwise will reduce the machine life.
8. after a long time the filter will be covered the dust, suction will be weakened. To avoid the weakening of suction, always clean the filter.
9. if any abnormal vibration or noise or smell, Must immediately stop using the machine, and maintenance.

Notes



تطبيق للملحقات

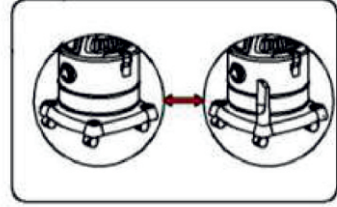


فرشاة التخزين، فوهة الشقوق، فوهة الأرضية، الأنابيب.

الصيانة

1. بعد تنظيف البراميل والمرشحات والملحقات ذات الصلة، تحقق مما إذا كان هناك تسرب. بعد كل استخدام قم بتنظيف المرشح ولا تستخدم مرشحا مبللا في جميع الأوقات.
2. تحقق من القابس إذا كان تالفا، ضع القابس.
3. تحقق مما إذا كان هناك شيء يسد مدخل الهواء، إذا كان هناك شيء، يرجى التنظيف.
4. ضع الجهاز بعناية، لا تضربه.
5. حافظ على الجهاز جافا
6. إذا كان الفلتر مغطى بالغبار، اغسله بالماء البارد، وإذا لزم الأمر، يمكنك أيضا استخدام منظف محايد للتنظيف، لا تستخدم أشياء تآكلية للتنظيف. لا تضع الرأس بالكامل مباشرة في الماء للتنظيف.
7. لا تترك الماكينة تعمل لفترة طويلة، كل وقت عمل هو الأفضل في غضون ساعتين، وإلا سيقطل ذلك من عمر الماكينة.
8. بعد فترة طويلة سيغطي الغبار الفلتر وسيضعف الشفط لتجنب ضعف الشفط، قم دائما بتنظيف الفلتر.
9. في حالة وجود أي اهتزاز أو ضوضاء أو رائحة غير طبيعية، يجب التوقف فورا عن استخدام الجهاز وإجراء الصيانة.

10. فرشاة اختيارية، فوهة. سيتم توصيل أحد طرفي الفرشاة في مكانه. (الشكل ١١)
11. املاً خزان المياه بماء نظيف جاهز لتنظيف السجاد. (الشكل ١٢)
12. أدخل سلك الطاقة. (الشكل ١٣)
13. اضغط على زر التبديل. (الشكل ١٤)
14. ابدأ تشغيل المكينة الكهربائية برؤوس الشفط الاختيارية. (الشكل ١٥)
15. قم بتوصيل جهاز التحكم عن بعد بخراطوم الشفط المرن مباشرة واضغط على زر التشغيل/الإيقاف لتنظيف السجاد. (الشكل ١٦)


تحذير: لا تقم بشفط الغبار مع السائل في نفس الوقت
التشغيل عندما يكون خزان الغبار ممتلئاً

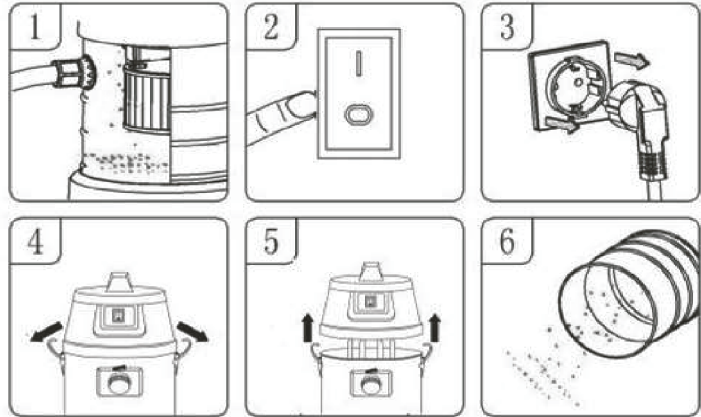

1. أسطوانة الغبار مليئة بالغبار. (الشكل ١)
2. أوقف تشغيل المفتاح. (الشكل ٢)
3. افصل سلك الطاقة. (الشكل ٣)
4. حرر قفل الأسطوانة. (الشكل ٤)
5. ارفع مجموعة الأنف من حاوية الغبار. (الشكل ٥)
6. تخلص من القمامة. (الشكل ٦)

تنظيف كيس الفلتر


يجب إخراج كيس الفلتر وغسله بالماء النظيف والدافئ عندما يكون مغطى بالغبار، ويمكنك استخدام المنظفات الخالية من الماء للغسل

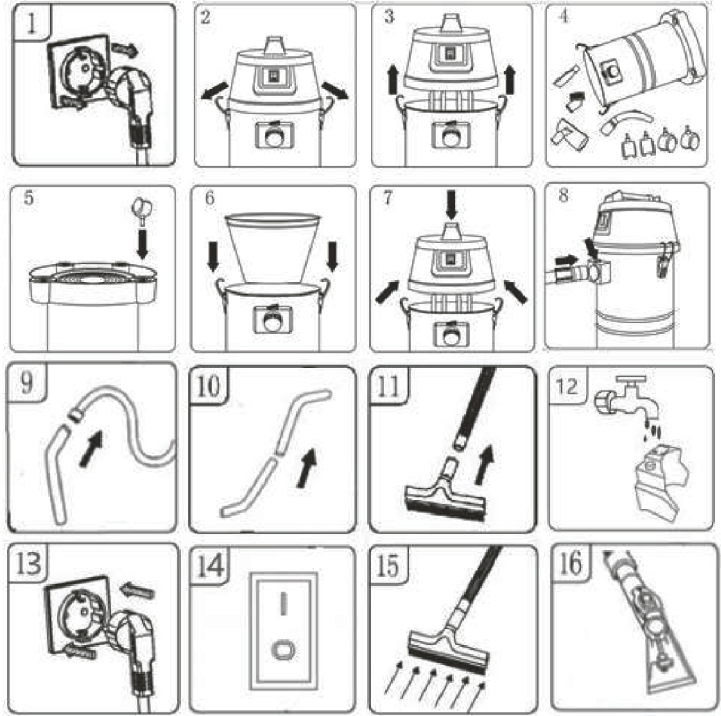

1. تأكد من فصل سلك الطاقة عن المقبس. (الشكل ١)
2. حرر قفل الأسطوانة. (الشكل ٢)
3. ارفع الأنف من أسطوانة الغبار وأخرج كيس الفلتر الأبيض. (الشكل ٣)
4. أخرج جميع الملحقات من أسطوانة الغبار. (الشكل ٤)
5. قم بتثبيت العجلات. قم بمحاذاة الفتحات المقابلة، واضغط لأسفل، وقم بتثبيت العجلات الأربع على القاعدة. (الشكل ٥)
6. ضع كيس الفلتر الأبيض في الأسطوانة. (الشكل ٦)
7. ضع الغطاء العلوي على كيس الفلتر وقم بقفله بكلا جانبي الإبزيم. (الشكل ٧)
8. اضغط على الزر الأحمر الموجود على المحول وأدخل خرطوم الشفط مع الموصل بالمحول للتأكد من توصيلهما جيدا. (الشكل ٨)
9. قم بتوصيل قطعة واحدة من الأنابيب المعدني بخرطوم الشفط. (الشكل ٩) ثم قم بتوصيل قطعتين من الأنابيب المعدنية معا. (الشكل ١٠)


9. قم بتوصيل قطعة واحدة من الأنبوب المعدني بخرطوم الشفط. (الشكل ٩) ثم قم بتوصيل قطعتين من الأنابيب المعدنية
12. معا. (الشكل ١٠)
10. فرشاة اختيارية وفوهة سيتم توصيل أحد طرفي الفرشاة في مكانه.
11. قم بتوصيل جهاز التحكم عن بعد بخرطوم الشفط مباشرة لتنظيف السجاد. (الشكل ١٢)

Switch	مفتاح
Press	اضغط على
Start vacuum	بدء تشغيل المكنسة الكهربائية
Press	اضغط على
Turn off vacuum	إيقاف تشغيل المكنسة الكهربائية

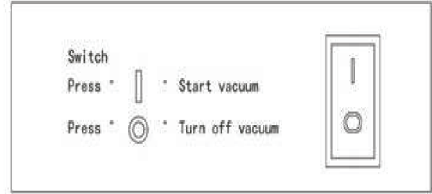

تشغيل المكنسة الكهربائية لشفط الغبار

التركيب

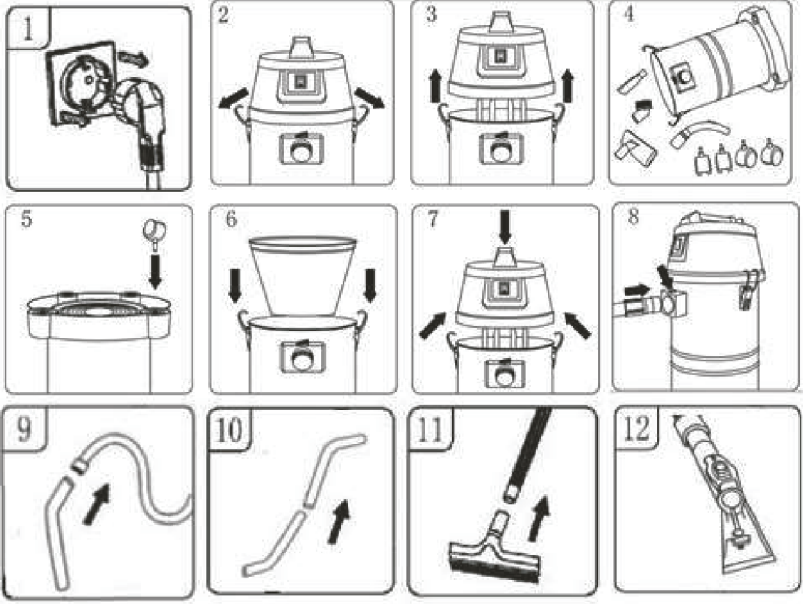

التنبيه: تأكد من فصل التيار الكهربائي عن قابس ومقبس الطاقة عند تجميع المكنسة الكهربائية

افتح المكنسة الكهربائية

1. تأكد من فصل سلك الطاقة عن المقبس (الشكل ١)
2. المشابك غير محكمة الغلق (الشكل ٢)
3. ارفع الأنف من أسطوانة الغبار وأخرج كيس الفلتر الأبيض. (الشكل ٣)
4. أخرج جميع الملحقات من أسطوانة الغبار. (الشكل ٤)
5. قم بتركيب العجلات. قم بمحاذاة الفتحات المقابلة، واضغط لأسفل، وقم بتركيب العجلات الأربع على 10. القاعدة. (الشكل ٥)
6. ضع كيس الفلتر الأبيض في الأسطوانة. (الشكل ٦)
7. ضع الغطاء العلوي على كيس الفلتر وقم بقفله بكلا جانبي الإبزيم. (الشكل ٧)
8. اضغط على الزر الأحمر الموجود على المحول وأدخل خرطوم الشفط مع الموصل إلى المحول 11. للتأكد من توصيلهما جيدا. (الشكل ٨)

البيانات الفنية


أي دي في سي دبليو - ٣٥

٢٤٠/٢٢٠ فولت ~، ٦٠/٥٠ هرتز، ٣٥ لتر

١٥٠ وات، الفئة الثانية، IPX4

اسم أجزاء المنتج


Handle	مقبض
Switch	مفتاح
Adapter	محول
Suction hose	خرطوم شفط
Barrel	برميل
Remote control	جهاز تحكم عن بعد
Barrel lock	قفل أسطوانتي
Water tank	خزان مياه
Storage rack	رف تخزين
Caster wheel	عجلة دوارة

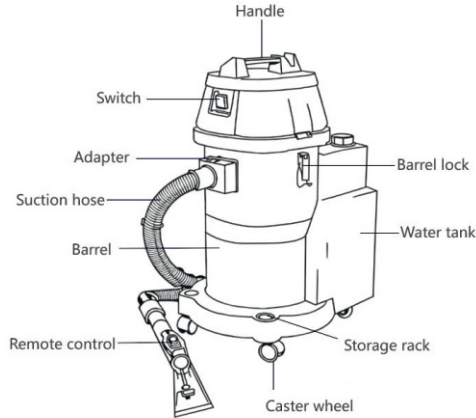

الملحقات متضمنة

وفقا للمناسبات المختلفة لاختيار الملحقات المناسبة

1. خرطوم الشفط	1
2. موصل قصير	2
3. موصل طويل	3
4. أنبوب معدني	4
5. فوهة الأرضية الجافة	5
6. فوهة الأرضية الرطبة	6
7. أداة الشقوق	7
8. فرشاة الغبار	8
9. جهاز التحكم عن بعد	9

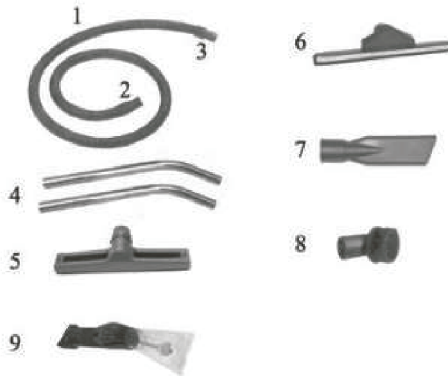

- تحقق دائما مما إذا كانت العوامة طبيعية أم لا.
- إذا لاحظت تسرب السائل من جهازك، فأوقف تشغيله على الفور وافصل القابس.
- لا تستخدم الجهاز في غرفة رطبة.
- يجب مراقبة الأطفال للتأكد من عدم لعبهم بالجهاز، فقط الأجهزة المخزنة في مكان آمن وجاف لا يمكن للأطفال الوصول إليه.
- لا تستنشق الغبار الساخن أو الرماد أو الأشياء الحادة.
- لا تلمس المتفرج مباشرة عند النفخ. عندما يحين وقت النفخ، ابتعد عن الأطفال. ارتد نظارات السلامة.
- لا تقم بعكس اتجاه المكنسة الكهربائية، مما يتسبب في تلف المحرك
- لا يمكن نفي الخرطوم بشكل مفرط وإجباره على الاستطالة، وإلا فسوف يتشوه الخرطوم أو يتلف.
- لا تسمح لجزء الغطاء بالتغلغل في الماء أو شطفه بالماء لمنع دخول الماء إلى الأجزاء الإلكترونية.
- التسرب، التشغيل السليم: امسح السطح برفق بقطعة قماش

تعليمات السلامة الهامة

يمكن استخدام هذا الجهاز من قبل الأطفال من سن ٨ سنوات وما فوق والأشخاص ذوي القدرات البدنية أو الحسية أو العقلية المحدودة أو الذين يفتقرون إلى الخبرة والمعرفة إذا تم إخضاعهم للإشراف أو التعليمات المتعلقة باستخدام الجهاز بطريقة آمنة وفهم المخاطر التي ينطوي عليها. لا يجوز للأطفال اللعب بالجهاز. لا يجوز للأطفال إجراء التنظيف والصيانة للمستخدم دون إشراف. في حالة تلف سلك الإمداد، يجب استبداله من قبل الشركة المصنعة أو وكيل الخدمة الخاص بها أو شخص مؤهل بشكل مماثل لتجنب المخاطر.


التخلص الصحيح من هذا المنتج تشير هذه العلامة إلى أنه يجب عدم التخلص من هذا المنتج مع النفايات المنزلية الأخرى في جميع أنحاء الاتحاد الأوروبي. لمنع الضرر المحتمل للبيئة أو صحة الإنسان من التخلص غير المنضبط من النفايات، قم بإعادة تدويره بشكل مسؤول لتعزيز إعادة استخدام الموارد المادية بشكل مستدام. لإعادة جهازك المستخدم، يرجى استخدام أنظمة الإرجاع والتحويل أو الاتصال ببائع التجزئة الذي تم شراء المنتج منه. ويمكنه أخذ هذا المنتج لإعادة تدويره بطريقة آمنة بيئياً.



تعليمات وتحذيرات السلامة

تعليمات السلامة الهامة

- من أجل سلامتك: اقرأ بعناية وفهم جميع التعليمات، يتوافق هذا الجهاز مع لوائح السلامة الإلزامية للمعدات الكهربائية. ومع ذلك، فإن الاستخدام غير السليم قد يضر بالأشخاص والممتلكات، لذا يرجى قراءة هذه التعليمات بعناية قبل تشغيل الجهاز.
- عند استخدام الأجهزة الكهربائية، يجب اتباع الاحتياطات الأساسية.
- لا تسمح بأي استخدامات أخرى أو تشغيل بدون مراقبة.
- تأكد من أن الجهد الكهربائي صحيح قبل الاستخدام.
- لا تستخدم مخرج الهواء مباشرة ضد الأشخاص أو الحيوانات عند استخدام هذا المنتج.
- لا يمكن أن يكون المصنع مسؤولاً عن الأضرار الناجمة عن الاستخدام غير السليم أو التشغيل غير السليم.
- في حالة تلف سلك الطاقة، اتصل بموظفي الخدمة المحليين أو الموظفين المؤهلين لدى الوكيل لاستبداله لتجنب الخطر.
- لا تستنشق السوائل القابلة للاشتعال والسامة، مثل البنزين أو الزيت أو الأحماض أو غيرها من المواد المتطايرة، لتجنب المخاطر الخطيرة.
- لا يمكن إصلاح المعدات الكهربائية إلا بواسطة المتخصصين ذوي الصلة. قد تؤدي الإصلاحات غير السليمة إلى مخاطر كبيرة.
- لا تقم بتخزين الجهاز مباشرة في درجات حرارة عالية مثل المواقد الساخنة أو مشعات التدفئة.
- لا تستخدم مواد التنظيف أو المنظفات التي تحتوي على المذيبات.
- لا ينطبق هذا الجهاز على الأطفال أو أولئك الذين يفتقرون إلى الخبرة في استخدام المنتجات ذات الصلة ما لم يتم الإشراف عليهم أو توجيههم لاستخدام الجهاز ليكونوا مسؤولين عن سلامتهم.
- يجب مراقبة الأطفال للتأكد من عدم لعبهم بالجهاز.
- قم بإيقاف تشغيل الجهاز عند تنظيفه أو إزالته. قبل تنظيف الجهاز أو صيانته، قم بإزالة القابس من المقبس واسحب القابس من المقبس.
- قد تكون الأجزاء غير المصرح بها أو الملحقات من جهات خارجية خطيرة مما يجعل الضمان غير صالح.

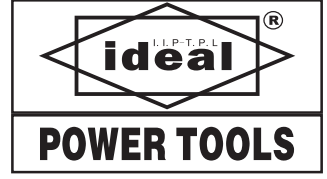


للتنظيف الجاف والرطب

مكنسة كهربائية

تعليمات التشغيل الأصلية

ID VCW35

رقم القطعة: ٢٩٠١٨

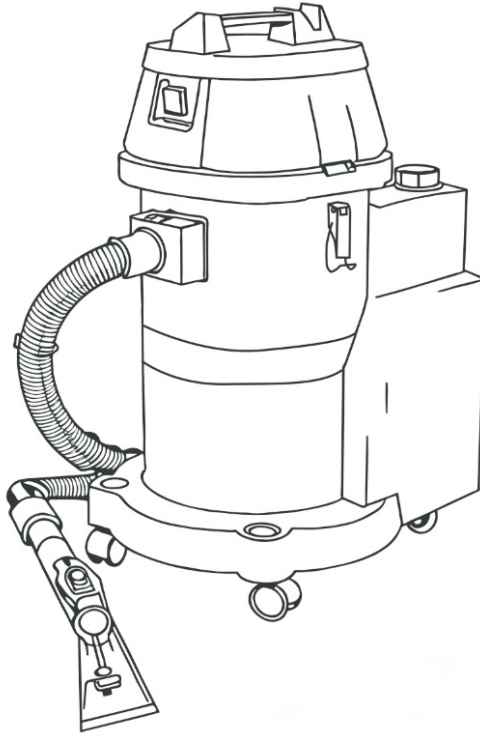

اقرأ بعناية وافهم هذه التعليمات قبل الاستخدام

